



HP Compaq Presario V6000 Trackpad Replacement

This guide will allow the user to replace the trackpad on a HP Compaq Presario V6000.

Written By: adam





TOOLS:

- [Metal Spudger](#) (1)
-

Step 1 — Trackpad



- Use the metal spudger to gently remove the plastic plate from the rest of the top panel.


⚠ Be careful not to break the plastic tabs connecting the two top panels.

Step 2



- Separate the connection of the top piece to the board.

Step 3

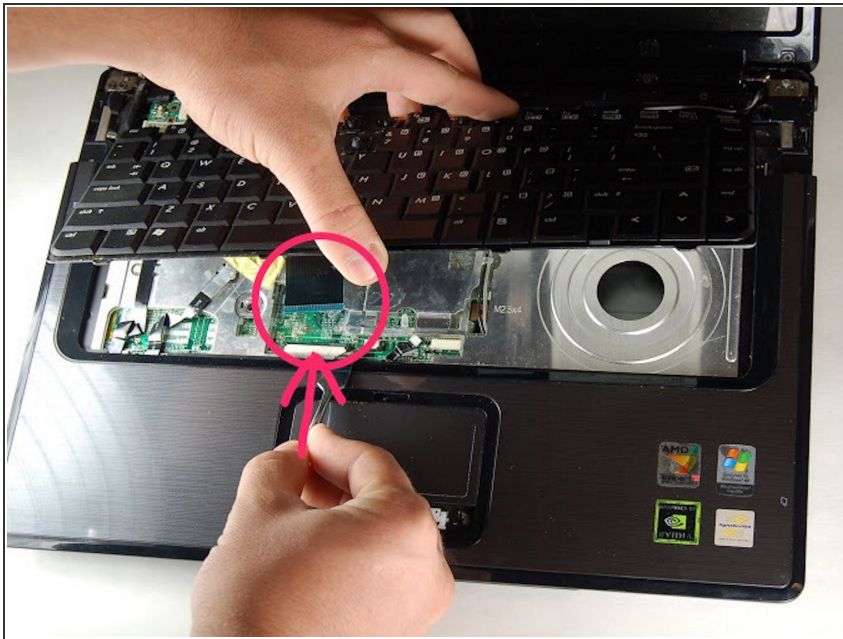


- Remove connection that is connecting the keyboard to the housing.

Step 4




- Separate the power connections.

Step 5

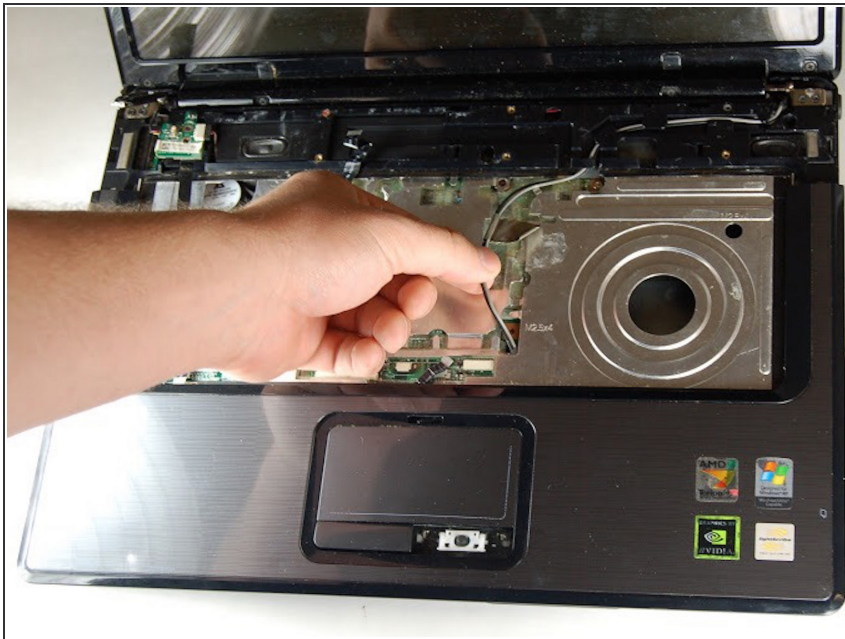

- Unravel the wire

Step 6

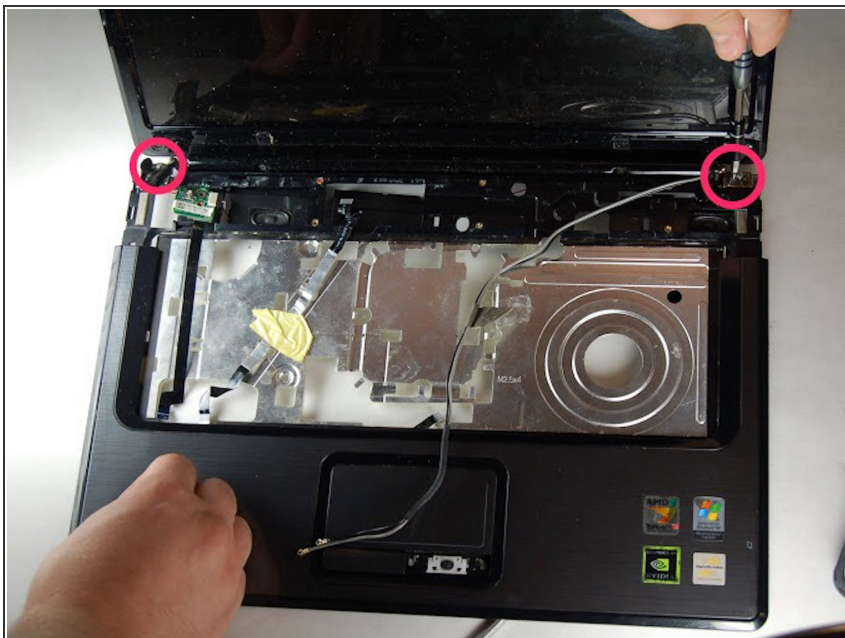

- Remove screws connecting plastic housing to screen


⚠ Remember when removing last screen be careful

Step 7



- Separating the two and be careful because you don't want to let go of screen and it fall

Step 8

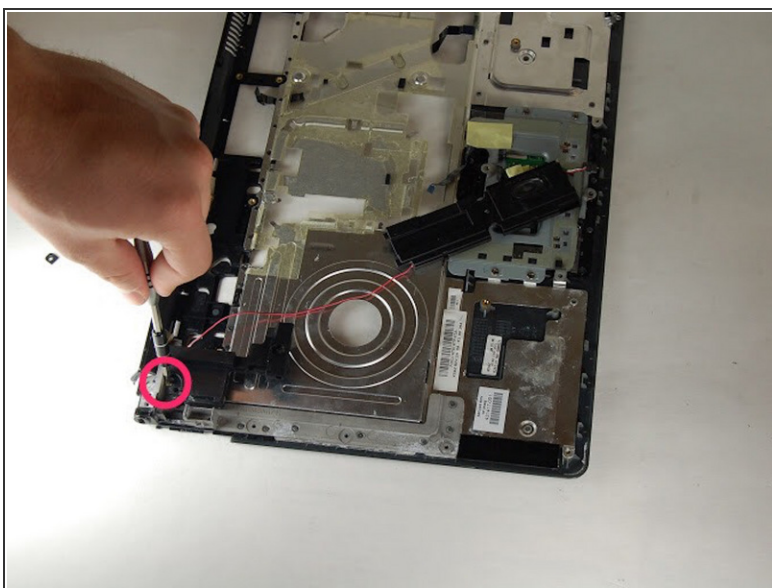

- Separating the screws that hold she last component of removing the track pad.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 07:35:39 PM.

